



## Soldering tips for using the coupling board.

1. First, solder the three parts on the PCB as indicated.

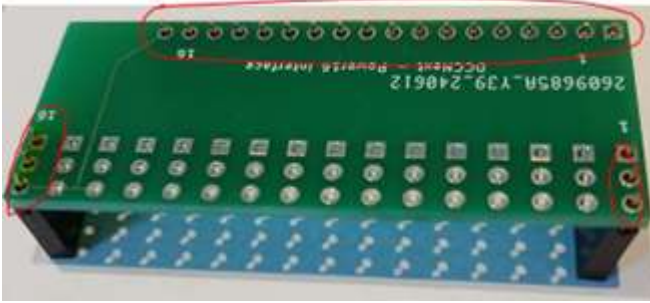


This keeps the print stable.

2. Then solder the remaining 14 Dupont pins.  
The middle row does not need to be soldered

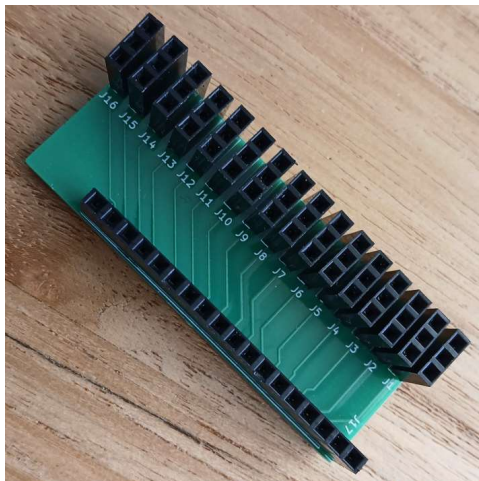

3. Now place 16 pieces of 3 Dupont pins in the 16 female Dupont pins.
4. Put the 16 pieces in the PCB of the DCCNext.

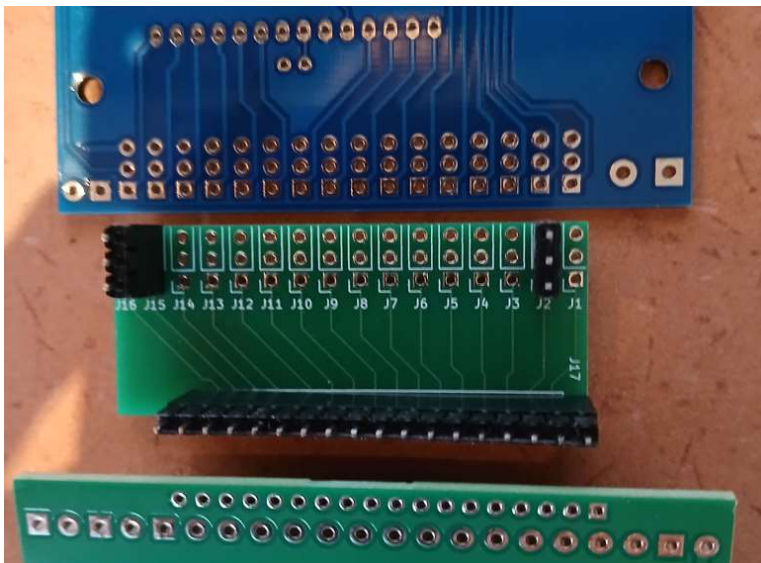

5. Now the Dupont pins can easily be soldered on the DCCNext.